


ERGONOMIC STANDING & SITTING STOOL

ASSEMBLY

Attention! The red plastic cap must be removed before use. If the red plastic cap is not removed, the wobble stool will not function properly.


Step 1

Remove the red plastic cap from the tip of the gas spring (C).

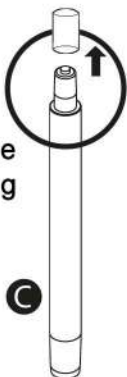


Step 2

Insert the gas spring (C) into the base (D). Once the alignment is correct, press the gas spring down firmly.

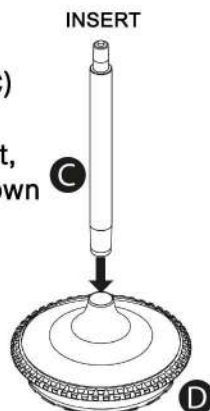


Step 3

Place the seat (A) on the padding and press the plastic tube (B) firmly against the seat until it clicks into place.

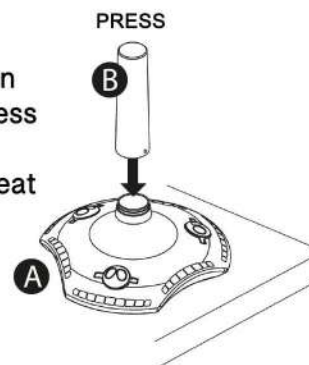

Step 4

Carefully slide the plastic tube (A+B) onto the gas spring (C+D). After alignment, press firmly on the seat. After alignment, press firmly on the seat and put your own weight on it so that everything locks into place properly.

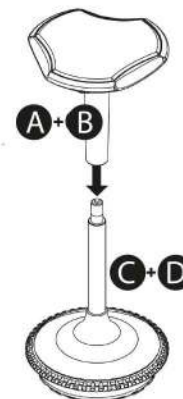


OPERATING INSTRUCTION

To raise the seat, press one of the 3 buttons under the seat.

To lower the seat, press one of the 3 buttons under the seat while sitting.

Troubleshooting - if the seat does not raise or lower easily:

1. Make sure that the red cap has been removed.
2. Press firmly on the seat so that it is fully engaged on the base.

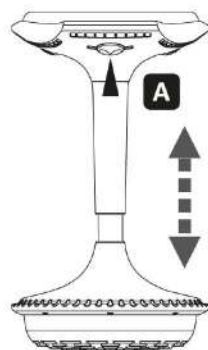

SITTING INSTRUCTION



Please note before use:

Our ergonomic standing & sitting stool is designed to allow you to move freely. The stool can rock, tilt and rotate 360°. Therefore, extreme caution is required when sitting.

Sit only when both feet are firmly planted on the floor.

To reduce the risk of a fall, do not lean back.

On a very slippery floor it is necessary to use a non-slip base such as a small carpet or mat.

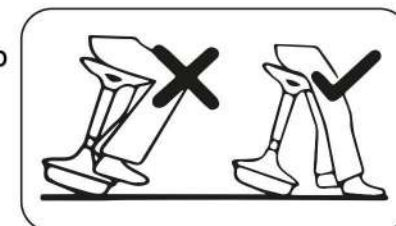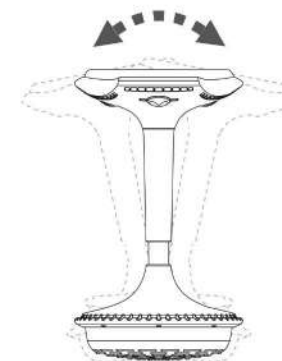

You have problems with the assembly or questions? Feel free to contact us.
E-Mail: support@desqup.de
Phone: 030-62939969

DESQUP



DESQUP Inh. Julius Junfert
Sterckmannweg 7
12685 Berlin, Germany

ERGONOMIC STANDING & SITTING STOOL


Attention! Read the operating instructions carefully and keep them for later use.
Ignoring the warnings and instructions can lead to product defects or injuries of persons.

CLEANING AND CARE INSTRUCTION

Fabric cover: Light stains can be removed with household textile detergent or a damp cloth and some mild soapy water.

Gas spring: Wipe with a damp cloth. Wipe dry with a clean cloth.

Base: Abrasion marks from shoe soles are best removed with a soft eraser or a soft cloth a soft cloth with benzine.

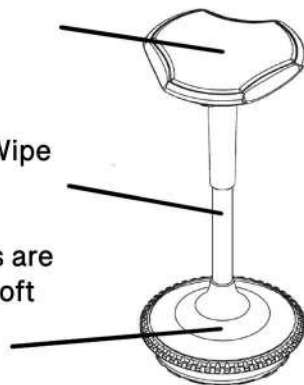


DISASSEMBLY

Step 1: Adjust the stool to the lowest height. Sit on a chair, for example, and hold the seat (A) with your hands and push the base (D) away from your body with your feet. With strength, the seat with plastic tube (A+B) should detach from the base with gas spring (C+D).

Step 2: Remove the plastic tube (B) by pulling it off the seat (A).

Step 3: Sit down again and hold the gas spring (C). Push the base (D) away from your body with your feet. Sometimes the gas spring (C) is firmly anchored in the base (D). Then you can remove base (D) with the help of a rubber hammer.

If step 3 doesn't work... you can take a bigger carton for return and leave the gas spring in the stand. Then we will take care of it.

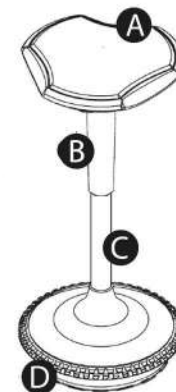

HAZARD WARNINGS

Work on the gas struts may only be carried out by trained specialists, so please do not open or modify the gas strut in any other way. There is a risk of injury if work is carried out improperly.

TECHNICAL DETAILS

Brand / Model	DESQUP / Wobble Ergonomic Sit & Stand Stool
Model no.	DU-105-S
Production date	2022/8
N.W / G.W.	9,8 KG / 11,8 KG
Adjustability	63-87 cm
Load capacity	130 KG
Diameter	Seat 29 cm, base 34 cm



You have problems with the assembly or questions? Feel free to contact us.
E-Mail: support@desqup.de
Phone: 030-62939969

DESQUP



DESQUP Inh. Julius Junfert
Sterckmannweg 7
12685 Berlin, Germany